

FLYCAM Flowline with Stabilizing Arm (FLCM-FLN-PA-01)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Body Support



Flowline Placid



Tensioner Spring



Safety Shock Cord



Storage Bag

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.


Flowline Vest Setup

NOTE: It is recommended to attach the minimum required weight (3kg / 6.6 lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

- Join support bar with section of support jacket by push-fit technique. Similarly, join front section with support bar as shown.



- Wear support jacket and tighten the buckles provided at waist and chest and adjust as per your convenience.

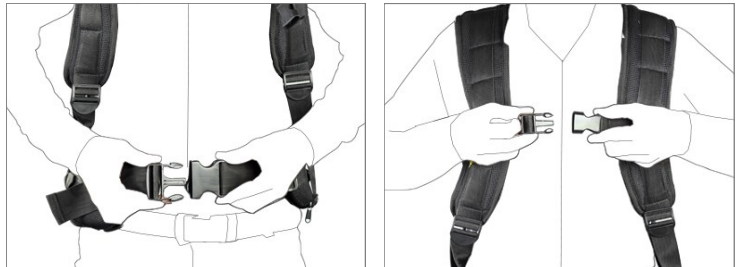


NOTE: The four knobs provided on back of support jacket allows height adjustment of support bar.




- Use spring at back of support jacket to adjust tension of rope as required.



- Attach camera to hook and tighten with provided knob to ensure slip-free connection.

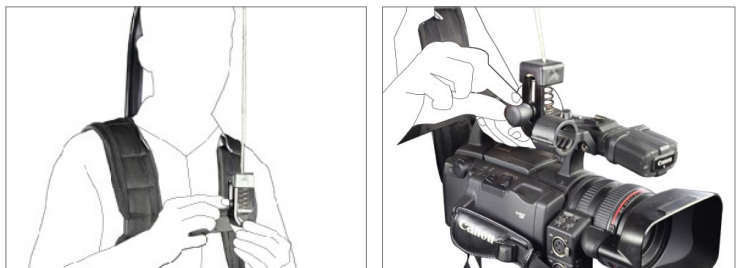

- Loosen knob at support bar to adjust position of camera according to eye-level, if required.

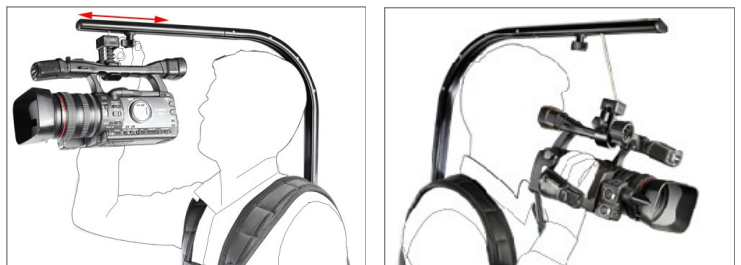

Placid Arm + Flycam Vest Setup

- Rotate the knob to release the spring tension.



- Loosen the knob of Hook and remove the spring of Hook.



- Now loosen the knot of rope in order to remove the rope from hook. Remove extension arm of Flowline. Re-attach arm upside down and tighten the knob properly




- Loosen Allen bolt of Placid Arm with help of Allen Key.



- Now pass the rope through Placid adapter as shown in the image. Mount Placid on Flowline arm and tighten the Allen bolt with help of Allen key.



- Align the rope with the pulley of Placid Arm.

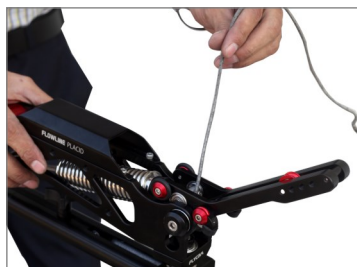

- Then insert the rope into Hook and tie the knot of Rope properly.



- Attach the spring to Hook and tighten the knob to secure it properly.



- Secure the Placid on Flowline Arm with provided tie to ensure slip-free connection.



- Now mount your camera setup on hook of Flowline and tighten the knob to secure it properly.



Install Flycam Flowline Placid and change the Spring, Follow this

<https://bit.ly/3Ae0t7a>

**YOUR FLYCAM FLOWLINE WITH STABILIZING ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.